


How to mount the [Snow Blower Impeller Kit](http://SnowBlowerImpellerKit.com)TM on your impeller blade in relation to the metal brace underneath the blade.

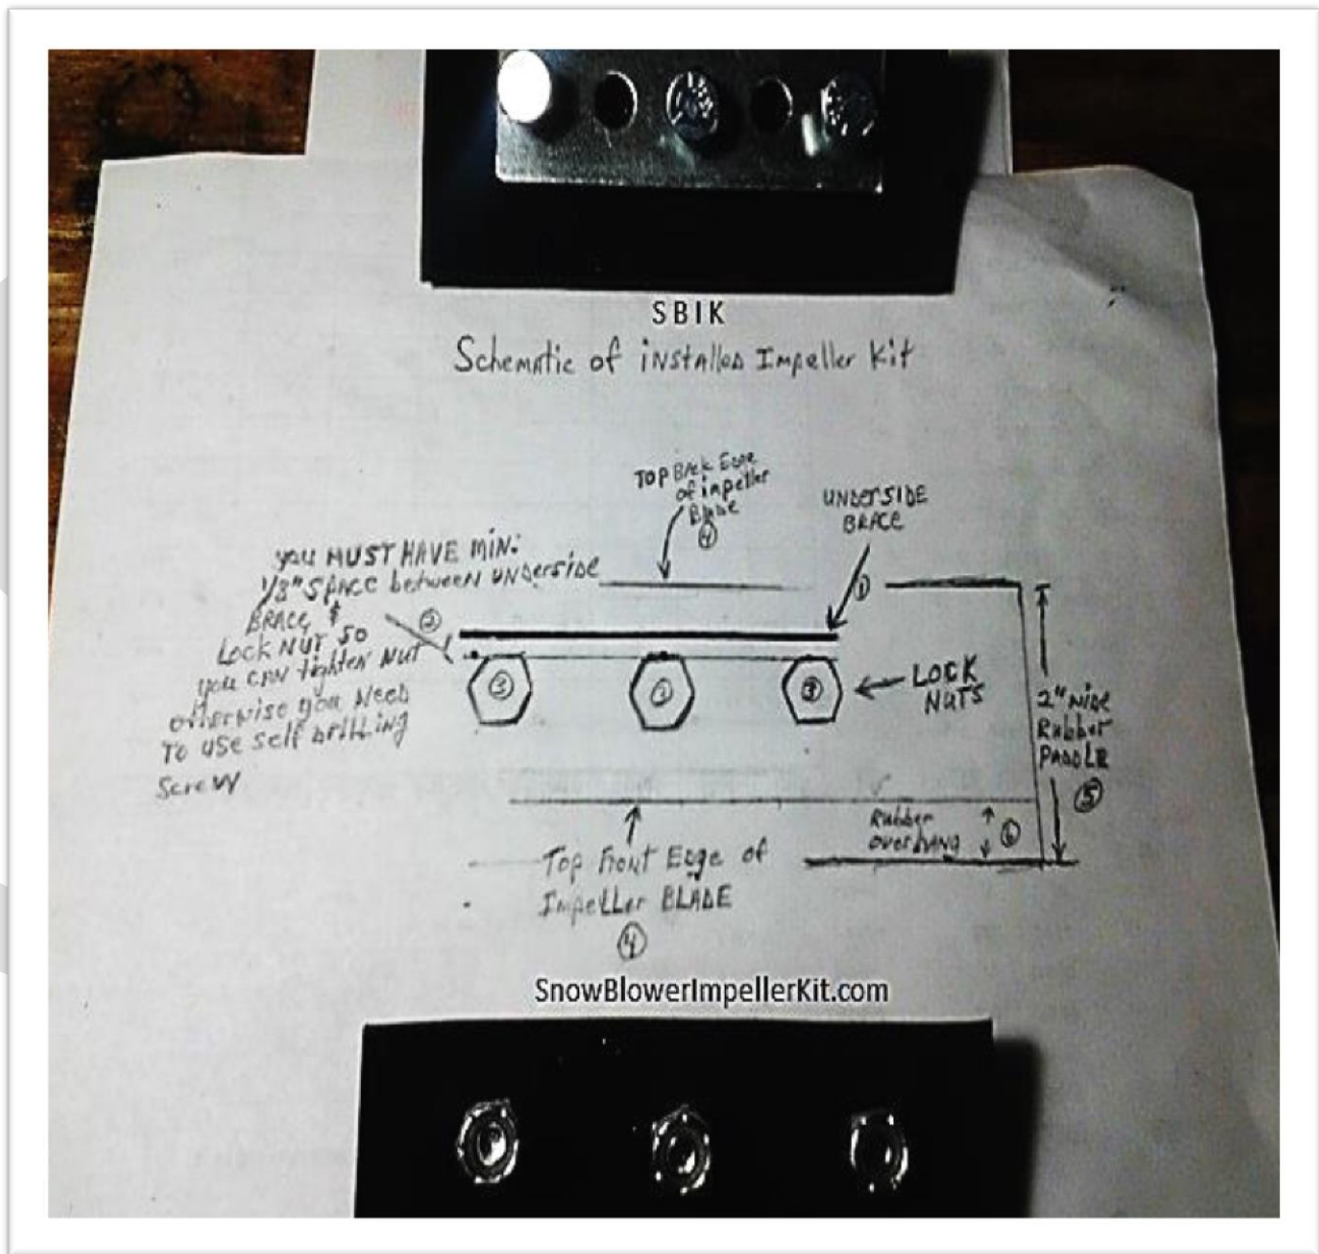

- You must have a minimum of 1/8" space between the underside brace and the lock nut so you can tighten nut, otherwise you might need to use a self-tapping screw in that bolt hole in place of a bolt/lock nut. The use of a self-tapping screw is only recommended for use in the middle mounting hole, and only if you cannot use a bolt/nut combination because the underside brace is in the way. If your kit's length has been customized and the metal strap has only four or three mounting holes, you should use only the two outside holes to mount the kit.. Keep in mind that for added safety, we do not recommend that you install the kit using only self-tapping screws!! They are not as secure as using bolts/lock nuts and can work themselves loose due to the tremendous stress and vibration they are subject to, and could become dangerous flying projectiles!!!